A/0 type Maintenance Schedule

Code	Service Required	Exceptional Use Cases (not scheduled by Maintenance Minder)
А	Replace engine oil	Replace oil 1 x per year if oil life has not expired after 12 months
0	Replace engine oil and oil filter	Replace oil 1 x per year if oil life has not expired after 12 months
1	Rotate tires	
2	Replace engine air filter*	*Gravel road/high soot. If you drive regularly on dusty gravel roads or areas with visible airborn soot, replace the air and cabin filter elements every 24,000km.
	Replace cabin air filter*	
	Inspect drive belts	
3	Replace transmission fluid*	*Mountains and towing. If you regularly pull a trailer or drive in slow steep mountainous regions, replace transmission fluid every 40,000km.
	Replace clutch fluid (only manual transmission models)	
	Replace transfer fluid (only V6 4WD/AWD models)	
4	Replace spark plugs	*Extreme temperatures. Replace timing belt every 100,000km if used often in extreme temperatures (over 43°C or less than -30°C).
	Inspect valve clearance	
	Replace timing belt (only V6 models)*	
	Inspect water pump (only V6 models)	
5	Replace engine coolant	
6	Replace rear differential fluid (only 4WD/AWD models)*	*Mountains and towing. First differential fluid change required at 12,000km, then
		every 24,000km if used for heavy towing or in mountainous regions.
7	Replace brake fluid	*If the Maintenance Minder indicator does not appear within 36 months of the last
		service for item 7, then change the brake fluid every 3 years (or 36 months)
9	Service front and rear brakes	
	Inspect the following items:	
	Check parking brake adjustment	
	• Tie rod ends, steering gear box	
	Suspension components	
	Driveshaft boots	
	Brake hoses and lines	
	All fluid levels and condition	
	Exhaust system	
	Fuel lines and connectors	
I	Check tire repair kit sealant expiration date (if equipped)	